



#### **RAIMONDI LIPPAGE SYSTEM**

The clip and wedge lippage system used to satisfaction by thousands of professionals worldwide.

Ensures proper leveling of tile by eliminating lippage speeding the tile setting process. Recommended when installing large format, heavy, flexible or thin bodied tiles.

## **LIPPAGE SOLUTION**

Various sizes and thicknesses of the R.L.S. clips are available from our standard 1/16" including 1/32", 1/8" and 1/16" joint size. Works with all of our clips offered and are reusable. The wedge is placed after the tiles and clips have been set.

Adjust the tension and remove the lippage using the floor or wall pliers.




### **LIPPAGE**

After the clips and tile have been set place the wedge in the clip and start tensioning it with the pliers.



#### **LEVEL**

Once the pliers are adjusted and the wedge is tensioned the lippage will start to level out.

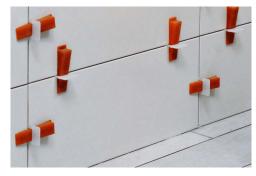

## **VERTICAL**

The R.L.S. system can be used vertically on walls, backsplashes, or any vertical configuration using the "wall" pliers (LSPLIERW).









LS200CLIPL LS400CLIPL LS1500CLIPL

1/16" joint size clip for 1/2" to 3/4" tile thickness.



LS250CLIP LS500CLIP LS2000CLIP

1/16" joint size clip for 1/8" to 1/2" tile thickness.



LS250CLIP18 **LS500CLIP18** LS2000CLIP18

1/8" joint size clip for 1/8" to 1/2" tile thickness.



LS250CLIP132 LS500CLIP132 LS3000CLIP132

 $\frac{1}{32}$ " joint size clip for  $\frac{1}{8}$ " to  $\frac{1}{2}$ " tile thickness.



LS250CLIP316 LS500CLIP316 LS2000CLIP316

 $^{3}/_{16}$ " joint size clip for  $\frac{1}{8}$ " to  $\frac{1}{2}$ " tile thickness.



## LS250WEDGE LS500WEDGE LS1000WEDGE

Wedges used with the clips can be reused.



**LSPLIERF** 

Ergonomic tension adjustable plier for floor installation.



**LSPLIERW** 

Ergonomic tension adjustable plier for wall installation.



#### LS100KIT

Bucket supplied with 100 regular clips, 100 wedges and a pair of floor pliers.

O





# **CLIP**

After spreading the adhesive insert the clip base under the tile along the four sides. Set the tile and beat it with a rubber mallet to remove any air pockets.



## **WEDGE**

Insert the wedge into the clip slot.



## **TENSION**

Use the pliers to tension the wedge and remove lippage. Do not pass the breaking point.



## **REMOVE**

Once the adhesive is set the protruding part of the clip must be removed. Using a rubber mallet of your foot hit or kick the clip parallel to the joint.



O



